




FUSS & O'NEILL

Manufacturing Solutions, LLC

"Enhancing Productivity"

X	Basic Skill
X	Counter Measure
O	Accessibility
X	Safety
O	Mistake Proofing
X	Productivity

What is that unpleasant grinding / squealing noise under the Guard ?

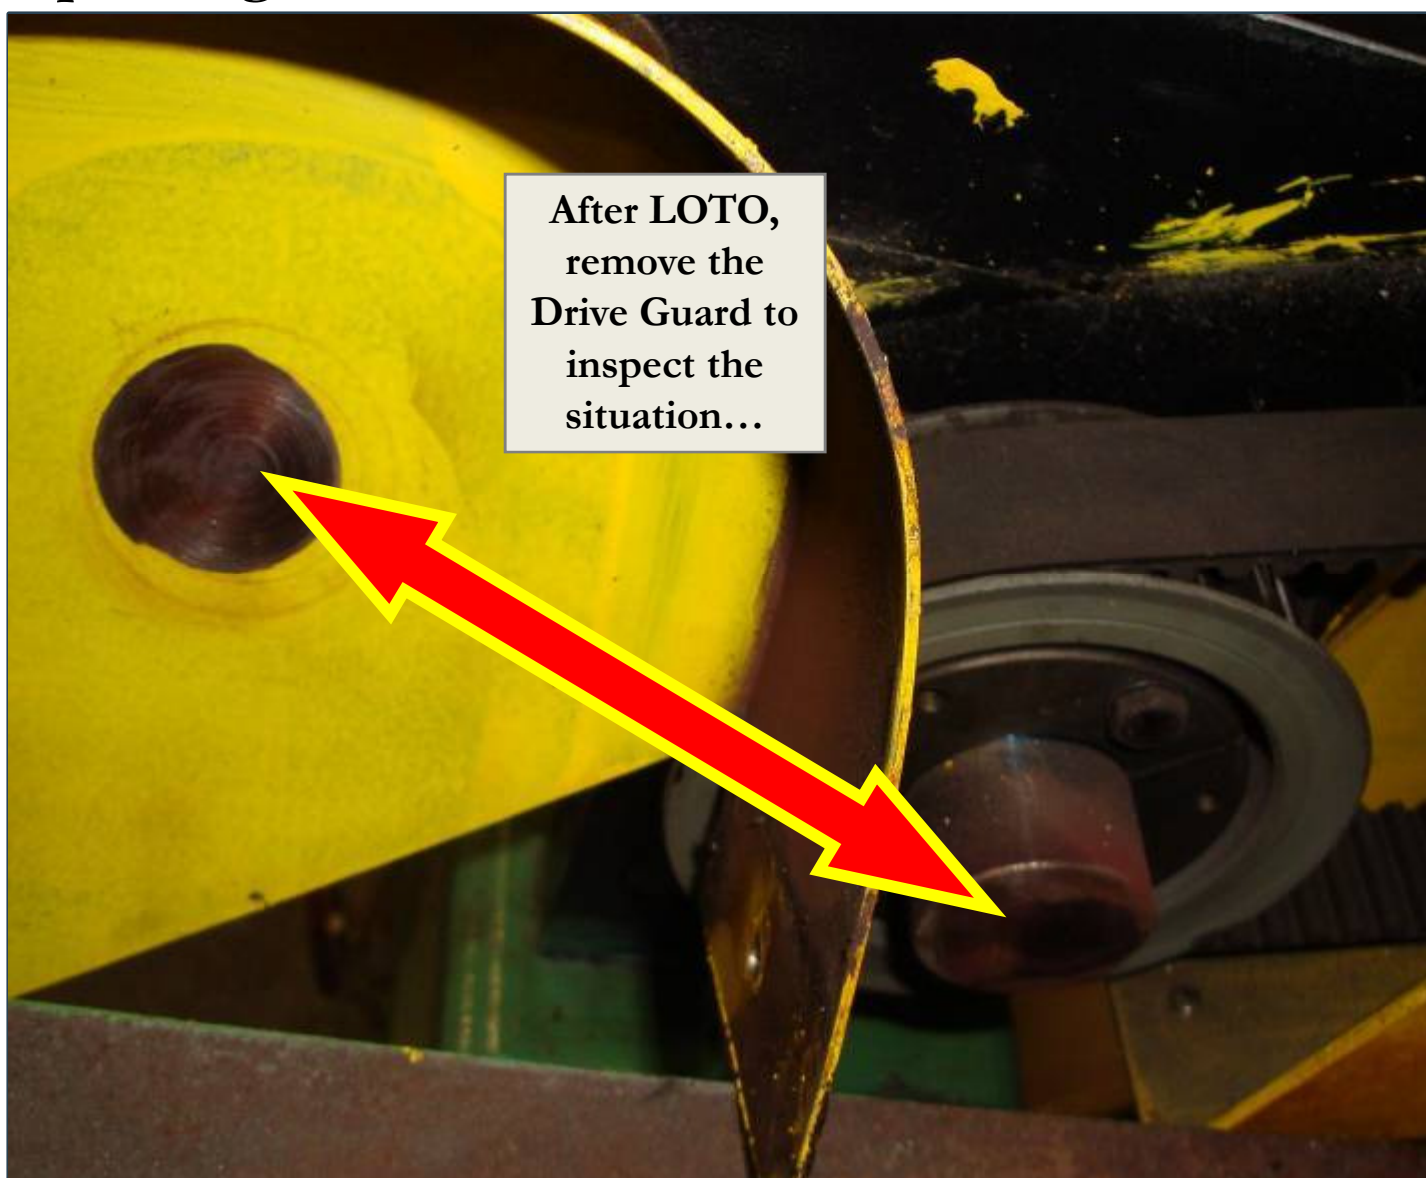

After LOTO,
remove the
Drive Guard to
inspect the
situation...

Most likely you will find the guard rubbing on the drive shaft end (notice the paint is missing). Simply fasten the guard away from the shaft in the slots provided.